



Verizon Wireless CDM 7075 Battery Replacement

This guide will instruct you on how to replace the battery for the Verizon Wireless CDM 7075.

Written By: Corey Ryman



INTRODUCTION

No tools are required for this guide.



PARTS:

- [Replacement Battery \(Model #DC070212LRR\)](#) (1)
-

Step 1 — Battery



- Depress the gray button on the back panel of the cell phone.

Step 2



- Press down and slide the back panel to remove it from the phone, while continuing to hold the gray button.

Step 3



- Carefully remove the battery from the phone, prying from the top.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:12:21 AM.